 
 


HOW TO FLY

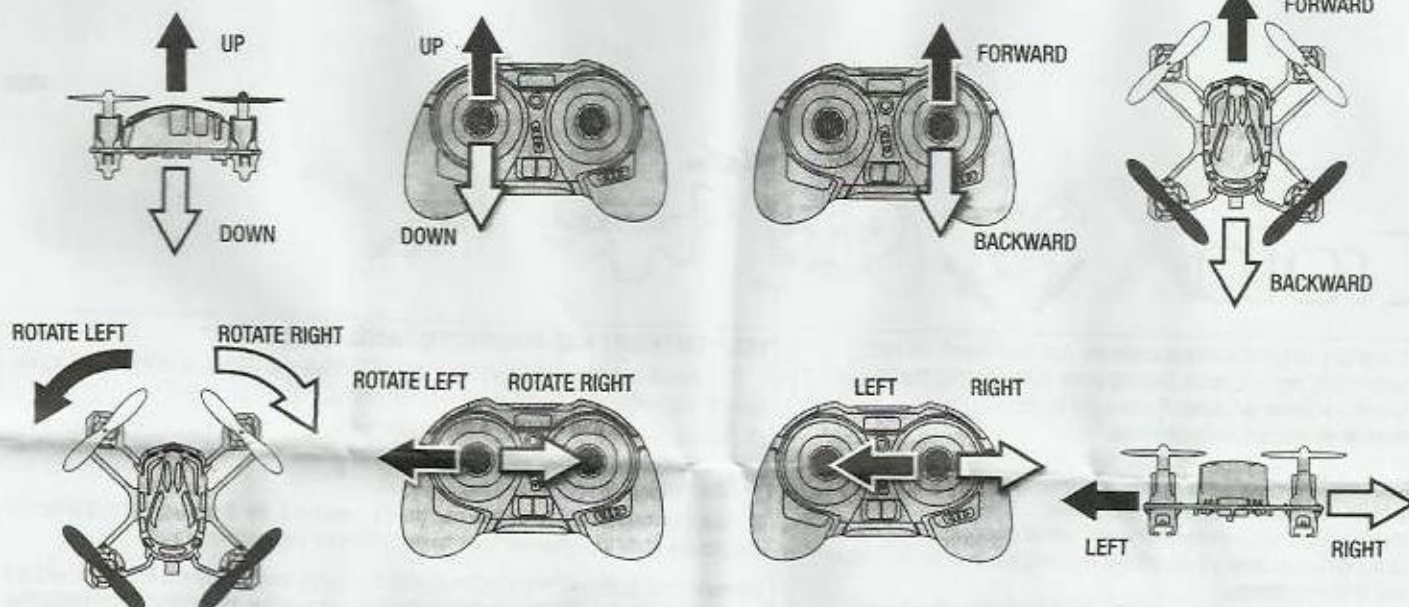 


CORRECTING DRIFT

It is normal for the Croto X to drift slightly. However if it drifts in any direction consistently press the trim button opposite the movement as many times as needed to eliminate the drift.

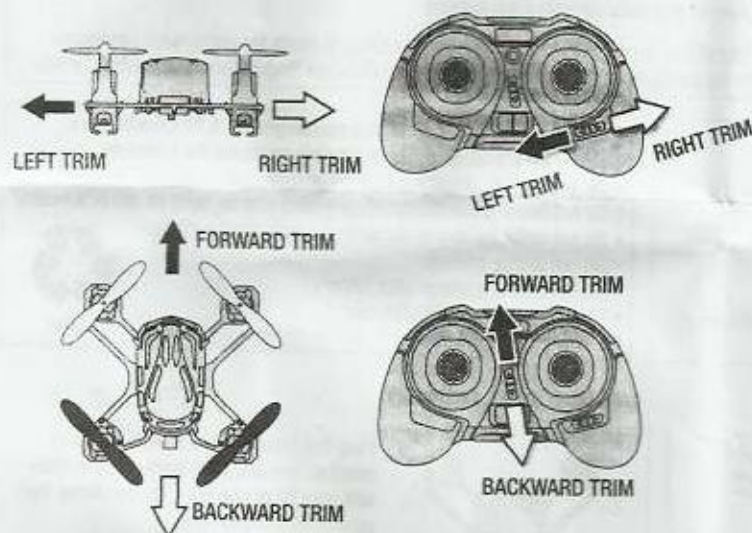

REPLACEMENT BLADES

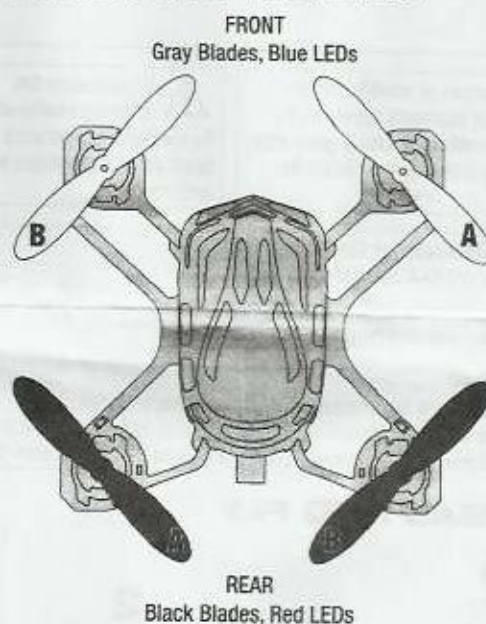

LANDING SAFELY

When the battery voltage begins to run low, the LEDs will begin to flash. It is time to land before the built in low voltage cut off reduces power to the motors.

LINK THE TRANSMITTER

Hold the throttle stick at full down and turn on the controller. Wait until LED turns stable red.

TROUBLESHOOTING

PROBLEM: Controller cannot be linked to the CrotoX.

SOLUTION: Throttle position needs to be at zero.

PROBLEM: Controller LED flashing after binding.

 
SOLUTION: Replace batteries.

PROBLEM: Croto X shaking.

SOLUTION: Check if the canopy, chassis and rotors are damaged.

PROBLEM: Will not take off.

SOLUTION: Check that the rotor blades are properly installed.

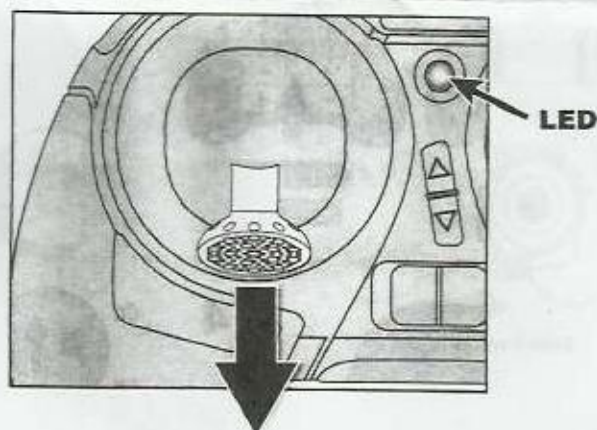



- Do not turn on Croto X unless controller has been turned on first.
- Keep hands, hair and loose clothing away from spinning blades.
- Turn off controller and Croto X when not in use.
- Parental guidance is recommended.
- Do not submerge into water. This could damage electronic assemblies.
- Follow operating instructions exactly.
- Not intended for children under 8 years old.
- Replace any damaged or broken parts before attempting to fly.
- Do not drop the Croto X by suddenly reducing the throttle. This could lead to severe damage.
- The Croto X's range will also be affected if the battery is not fully charged.
- Do not touch the motors after flying. They can become hot.

CAUTION: Changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

Do not touch the spinning blades or fly over another person's head. Adult supervision is required.

Battery Requirements for Controller:

Requires: 2 x 1.5V AAA size batteries (not included)

Requirements for USB Charge Cord:

USB Output Jack (not included)

Battery Cautions:

- Parental guidance is recommended when installing batteries.
- Do not power controller by mixing different types of batteries, or old and new batteries.
- Use only batteries of the same or equivalent type as those recommended.

FCC STATEMENT AND INDUSTRY CANADA NOTICE:

1. This device complies with Part 15 of the FCC Rules and RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Remark: This device is in accordance with the digital device grade B limitation and the 15th regulation of FCC. This limitation requires reasonable anti-interference protection around the residence. The device can transmit radio wave during use and can interrupt the mobile communication without proper installment. Interruption will occur for special device. If the device do interrupt the radio or television, please turn the device off then turn it on to adjust. Below are some resolution for your reference:

- Move the receiving antenna
- Enlarge the distance between the device and receiver
- Try to not connect the device and the receiver on the same circuit
- Ask for professional help from experts

 
 
3. This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of Industry Canada.

The Croto X is equipped with a rechargeable 3.7V LiPo battery. Please pay attention to the following cautions for safe use:

- Do not dispose of battery into fire or heat.
- Do not use or leave battery near a heat source, such as fire or a heater.
- Do not strike battery or throw it against a hard surface.
- Do not pierce battery.
- Do not disassemble or alter battery.
- Turn off power switch after use.
- Recycle used batteries.



GET READY TO FLY

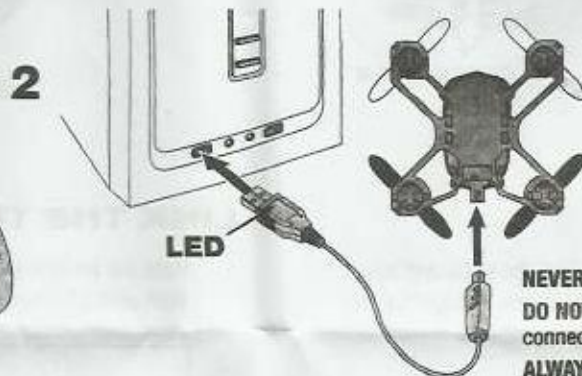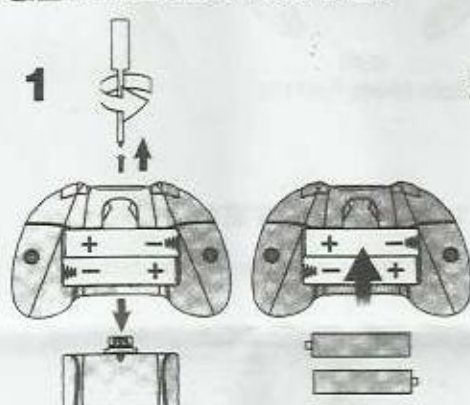

Plug the charger into a USB port and quad as shown. (The battery connector will only fit in one way. Do not force the connectors together.)

The red LED will shut off when charging. The red LED will light once the charge is complete.

NEVER leave the Croto X unattended when charging. **DO NOT** allow the USB port to power down when connected to the CrotoX.

ALWAYS unplug the CrotoX when charging is complete.



Switch on controller.



5 Set the Croto X on a level surface until the blue LEDs change from blinking to solid.

